



1. assemble motorcycle adaptor (Fig.1)

- 1) Install 7 to 1
- 2) Use 6 and 9 to install 2 to 1
- 3) Install 4 to 1
- 4) Connect 7 and 2 by 8

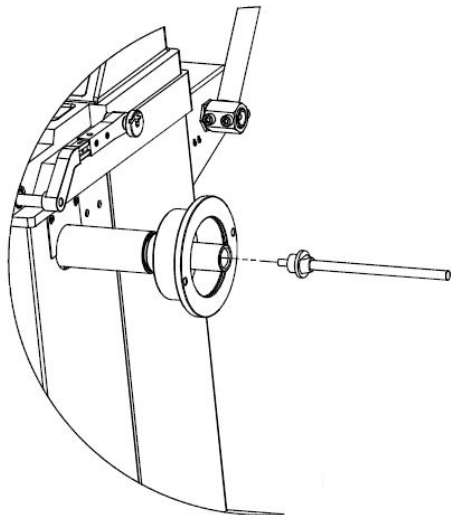

2. Install screw to balancer (Fig.2)

- 1) Take off the main screw from the balancer
- 2) Use the adaptor screw

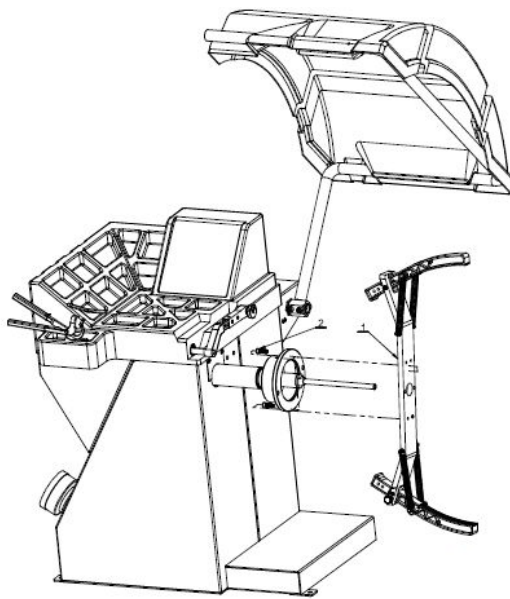

3. Install motorcycle adaptor to balancer (Fig.3)
- 1) Use 2 to fix 1 to the shaft, must be very tight!